

# Tonneau Fitting Instructions

**Ford Falcon FG Ute  
June 2008 – July 2016**

**Part number: 10937**

## Package includes

1 x Tonneau Cover

4 x Bar Brackets

2 x Support Bar

8 x Rivets

2 x Support Bar Sheath

1 x Fitting Instructions

# 1. TONNEAU COVER FITTING

**NOTE** Read entire instructions prior to start.

## 1.1 BASIC TOOL REQUIRED

Drill, 4mm Drill Bit, Rivet Gun, Marking Pencil / Pen


## 1.2 TONNEAU COVER INSTALLATION PROCEDURE

### 1. Fit Bar Brackets:

Measure 640mm and 1240mm from the front of the tub. Place centre of brackets at these points with the top of the bracket 10mm down from top edge of tub.

Using Bar Brackets as guide, drill into the body.

Rivet into place.

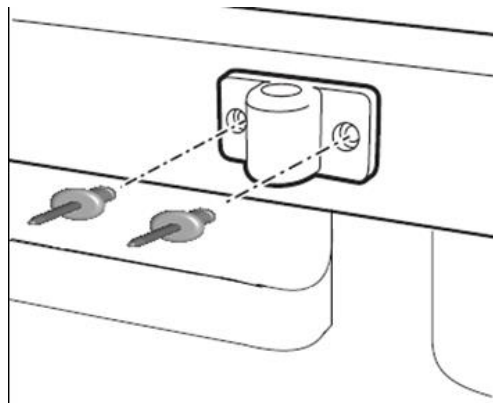

### 2. Install Support Bars:

Follow instructions in Section 2 to install the 2 Support Bars.


### 3. Install Tonneau Cover:

Place Tonneau Cover over Support Bars and secure the 'J' plastic retainer to the front rail.

Pull the rear of the cover over the tailgate to make cover taut. Hinge the plastic over the top edge of the rail.

Keep pressure and push the hook of the plastic over the bottom lip of the rail to secure into place.

Secure the cover along the entire length of the tailgate rail and repeat the process for the passenger and driver side of the tub.

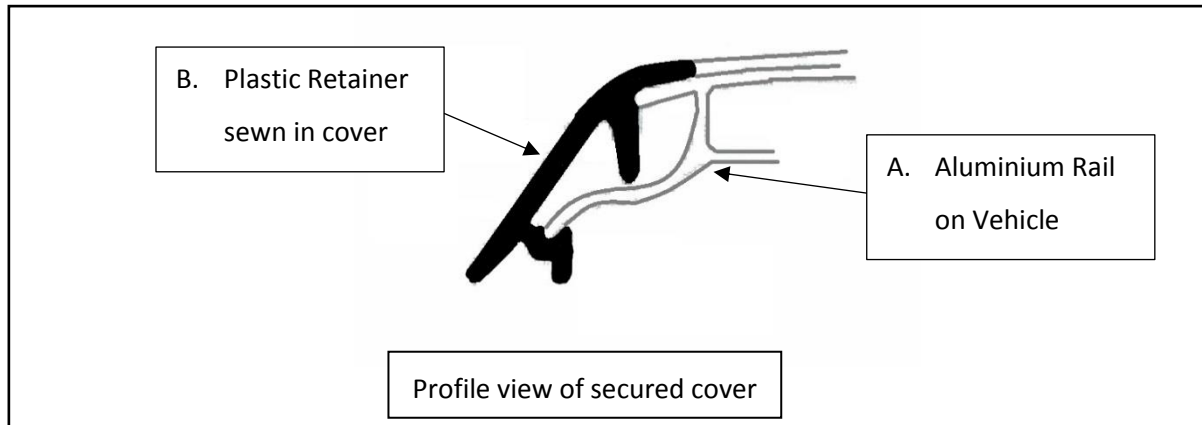

### Using Internal Elastic Shock Cord:

The plastic clips on the internal shock cord can be hooked into the aluminium extrusions so that the cover can still be secured with larger loads in the tub.

## 2. MULTI-FIT SUPPORT BAR

The Tuff Tonneau Multi - Fit Support Bar is designed to fit almost all Utes on the Market, from Subaru Brumbys to Cab Chassis aluminium trays.

### 2.1 BASIC TOOL REQUIRED

4mm Allen Key

### 2.2 MULTI-FIT SUPPORT BAR CONTENTS

- 2 x hollow bar centrepiece
- 4 x grub screws
- 4 x solid bar end piece
- 2 x Tonneau bar sheath

### 2.3 FITTING MULTI-FIT BAR

1. Insert solid bar pieces into either end of hollow tube. Adjust bar so it fits between bar bracket holders with the holes facing to the ground.

2. Join the pieces back together and screw grub screws through the hollow bar. Then place the tonneau sheath over the bar to stop the bar wearing against the tonneau. Refit the bar. You may kink the bar in the middle to give it some extra height to assist with water runoff.

**Warning if you do not fit the tonneau sheath over the bar, the tonneau cover will quickly wear through which is not covered by warranty.**

### 3. WARRANTY AND FEEDBACK

**Please register your warranty details online at:**

**QR Code:**



**Website Link:**

<https://www.tto.com.au/en-au/warranty.html>

**Please complete our 2 minute feedback section as we strive to constantly improve for our customers.**

**Your Tuff Tonneau is now ready for work.**