

# TONNEAU FITTING INSTRUCTION

Mahindra Pik-Up Dual Cab

With Built-in Sports Bar and Factory Liner

2018-Current

**Part number: 11431**

## Package includes

1 X Tonneau Cover	2 x Bar Brackets
1 x Tonneau Support Bar	31 x Rivets
1 x Aluminium Rope Track-1260mm long	1 x Lock Bracket
1 x Support Bar Sheath	18 x Rope Buttons
1 x Fitting Instructions	

# 1. TONNEAU COVER FITTING


**NOTE** Read entire instructions prior to start.

## 1.1 BASIC TOOL REQUIRED

Drill, 4mm Drill Bit, Rivet Gun, Marking Pencil / Pen

## 1.2 TONNEAU COVER INSTALLATION PROCEDURE

1. Rest the aluminium rope track on top edge at the front of the tub and centralize. The 'C' channel of the rope track needs to face the front of the car. Line up the front edge of the rope track so that it is flush with the outside edge of the front tub wall.
2. Using a 4mm drill bit, drill 5 evenly spaced holes through the aluminium rope track, through the tub liner and into the top of tub. The first hole at each end should be 20mm from the edge of the aluminium rope track.
3. Once all the holes have been drilled, squeeze silicon along the back of the rope track and pop rivet into place.
4. To fit the bar brackets, measure 800mm back from the inside front edge at the top of the tub and place them as shown in diagram A. (5mm from top edge of tub). Drill and rivet each Bar Bracket into place. Install the support bar according to section 3 of these supplied instructions.

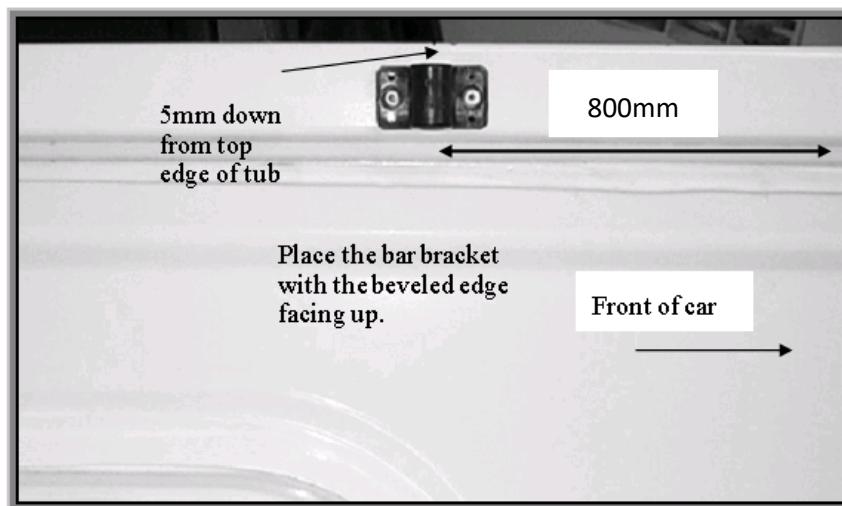

5. To fit the round buttons, measure 110 mm down from the bottom edge of the tub liner and line up each hook to each individual bunji loop starting with the two either side of the tailgate and working your way around to the front, drill and rivet buttons alternating from one side of the tub to the other.

## 2. TONNO LOCK

The Tonno Lock is now a standard feature included with all Tuff Tonneaus. The Tonno Lock is situated at the front of the tonneau cover, so as not to impede the accessibility of the Tuff Tonneau.

Fitting the lock is simple and only requires a small attachment on the inside edge of the tub behind the cab. Together with a padlock, it provides you with an extremely effective theft deterrent. The Tonno Lock is designed to suit

all utes and prevent thieves stealing your Tuff Tonneau, so you can continue to rely on the Tuff Tonneaus' name to give you what you want in a tonneau cover.



### 2.1 BASIC TOOL REQUIRED

Rivet gun, Drill, Torch, and Marking Pencil/Pen.

You will need to buy a small Padlock- make sure the padlock will go through the hole on the Tonno lock.

### 2.2 TONNO LOCK CONTENTS

- 2 X 4MM Aluminium rivets
- 1 x Tonno Lock bracket

### 2.3 FITTING TONNO LOCK

1. Attach the black lock bracket to the bracket on the tonneau with your padlock, and fit the tarp.
2. Getting under the tarp with a torch, place the lock bracket against the body and mark holes with a pen.
3. Remove tonneau and drill the marks with a 4 mm drill bit, place the lock bracket in position and rivet.

## 3. MULTI-FIT SUPPORT BAR

The Tuff Tonneau Multi - Fit Support Bar is designed to fit almost all Utes on the Market, from Subaru Brumbys to Cab Chassis aluminium trays.



### 3.1 BASIC TOOL REQUIRED

Drill, 4mm drill bit

### 3.2 MULTI-FIT SUPPORT BAR CONTENTS

- 1 x hollow bar centrepiece
- 2 x grub screws
- 2 x solid bar end piece
- 1 x Tonneau bar sheath

### 3.3 FITTING MULTI-FIT BAR

1. Insert solid bar pieces into either end of hollow tube. Adjust bar so it fits between bar bracket holders with the holes facing to the ground (so the grub screws don't rub against the tonneau), as shown above and then with a white pencil make a mark through the small holes of the hollow bar onto the solid ends. This is where you will drill a hole to the depth of about 1-2mm (do not go any further)
2. Join the pieces back together and screw grub screws through the hollow bar into the holes that you drilled. **Make sure you do not over tighten the grub screws**. Then place the tonneau sheath over the bar to stop the bar wearing against the tonneau. Refit the bar. You may kink the bar in the middle to give it some extra height to assist with water runoff.

**Warning if you do not fit the tonneau sheath over the bar, the tonneau cover will quickly wear through which is not covered by warranty.**

## 4. WARRANTY AND FEEDBACK

**Please register your warranty details online at:**

**QR Code:**



**Website Link:**

**<http://www.tto.com.au/en-au/warranty.html>**

**Please complete our 2 minute feedback section as we strive to constantly improve for our customers.**

**Your Tuff Tonneau is now ready for work.**