



1

# TONNEAU FITTING INSTRUCTION

Mitsubishi MV Triton Dual Cab

With Headboard

March 2024 - Current

Part number: 11809

Package includes	
<input type="checkbox"/> 1 X Tonneau cover	<input type="checkbox"/> 2 x Bar Brackets
<input type="checkbox"/> 1 x Tonneau Support Bar	<input type="checkbox"/> 30 x Rivets
<input type="checkbox"/> 4 x Aluminium Angles	<input type="checkbox"/> 1 x Rust Inhibitor
<input type="checkbox"/> 1 x Tailgate Rail (1330mm)	<input type="checkbox"/> 1 x Lock Bracket
<input type="checkbox"/> 2 x Side Rail (1270mm)	<input type="checkbox"/> 2 x Anti Abrasive Discs
<input type="checkbox"/> 1 x Support Bar Sheath	

# 1. TONNEAU COVER FITTING

## **NOTE**

Read entire instructions prior to start.

## 1.1 BASIC TOOL REQUIRED


- Drill, 4mm Drill Bit, Rivet Gun, Marking Pencil / Pen

## 1.2 TONNEAU COVER INSTALLATION PROCEDURE

### Attaching Front Rails

- Align the 4 front rails between the header bar. Figure 1
- Mark the 8 hole positions on the tubs header bar using the 4 front rails as templates.
- Then remove the front rails before drilling the holes.
- Drill 8 holes using a 4.2mm drill bit into marked positions.
- Deburr and remove shavings after drilling. Clean with surface cleaning wipe.
- Carefully apply rust preventative into drilled holes.
- Rivet the 4 front rails into place using rivets.

Figure 1

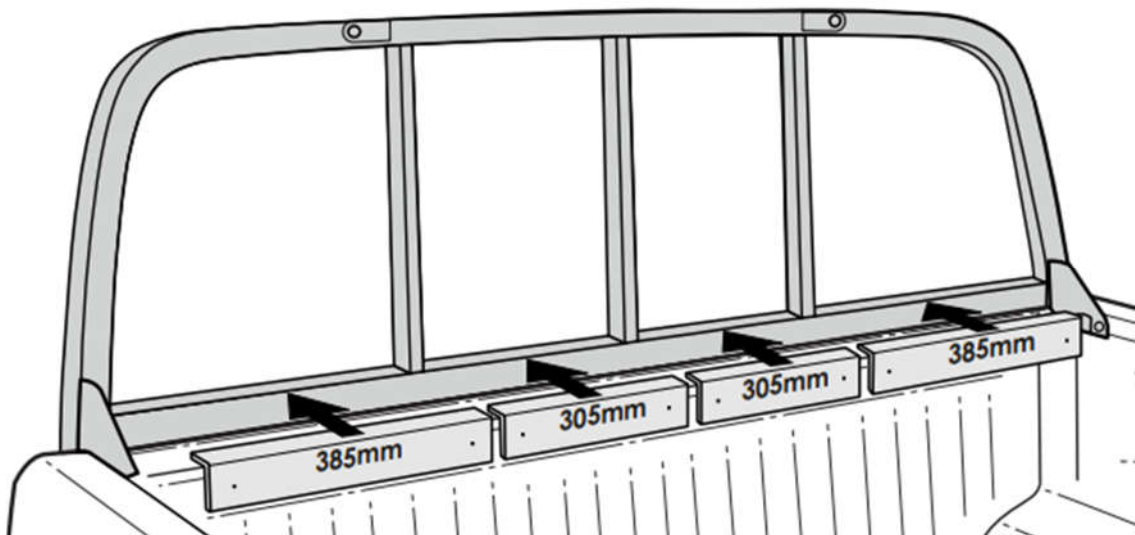

### Attaching Side Rails

- To attach the side aluminium rails, clean the top surface of the tub walls. Remove the red backing tape from the rail.
- Align the inside edge of the rail with the inside driver's side edge of the tub.

- j. Slide each rail down keeping the taped surface square with the top of the tub. Press down firmly to ensure adhesion.
- k. Use Drill Template to mark the drill holes then drill through each rail into the side of the tub.
- l. Rivet each hole once they have all been drilled. Repeat for Passenger Side of vehicle.

#### Attaching Tailgate

- m. To attach the tailgate, use the tailgate drill template to mark the hole positions then proceed to drill the holes.
- n. To attach the bar brackets, rivet them to the two remaining wholes on each side of the rails.
- o. To attach the cover, clip the front plastic to the front ally.
- p. Pull the cover over support bar and drape the cover across the tub.
- q. Clip the rear of the cover onto the tailgate rail, then clip the sides onto the side rails.

#### Using Internal Elastic Shock Cord:

The plastic clips on the internal shock cord can be hooked into the aluminium rails so that the cover can still be secured with larger loads in the tub.

**NOTE:** You can adjust your tonneau, to make it tighter or looser, by simply raising or lowering the height of your tonneau support bar.

## 2. TONNEAU COVER FITTING

The Tuff Tonneau Multi - Fit Support Bar is designed to fit almost all Utes on the Market, from Subaru, Brumby's, to Cab Chassis and aluminium trays.



### 2.1 BASIC TOOL REQUIRED

Drill, 4mm Drill Bit, Rivet Gun, Marking Pencil / Pen

### 2.2 MULTI-FIT SUPPORT BAR CONTENTS

- |                              |                          |
|------------------------------|--------------------------|
| - 1 x hollow bar centrepiece | - 2 x grub screws        |
| - 2 x solid bar end piece    | - 1 x Tonneau bar sheath |

### 2.3 FITTING MULTI-FIT BAR

1. Insert solid bar pieces into either end of hollow tube. Adjust bar so it fits between bar bracket holders with the holes facing to the ground (so the grub screws don't rub against the tonneau), as shown above and

then with a white pencil make a mark through the small holes of the hollow bar onto the solid ends. This is where you will drill a hole to the depth of about 1-2mm (do not go any further)

2. Join the pieces back together and screw grub screws through the hollow bar into the holes that you drilled. **Make sure you do not over tighten the grub screws**. Then place the tonneau sheath over the bar to stop the bar wearing against the tonneau. Refit the bar. You may kink the bar in the middle to give it some extra height to assist with water runoff.

**Warning if you do not fit the tonneau sheath over the bar, the tonneau cover will quickly wear through which is not covered by warranty.**

### 3. WARRANTY AND FEED BACK

**Please register your warranty details online at:**

**QR Code:**



**Website Link:**

<https://www.tto.com.au/en-au/warranty.html>

**Please complete our 2 minute feedback section as we strive to constantly improve for our customers.**