

TONNEAU FITTING INSTRUCTION

RODEO DUAL CAB

1988-1996

Part number: 207

<input type="checkbox"/> 1 X Tonneau Cover	<input type="checkbox"/> 2 x Bar Brackets
<input type="checkbox"/> 1 x Tonneau Support Bar	<input type="checkbox"/> 24 x Rivets
<input type="checkbox"/> 1 x Support Bar Sheath	<input type="checkbox"/> 1 x Lock Bracket
<input type="checkbox"/> 1 x Fitting Instructions	<input type="checkbox"/> 12 x Rope Buttons
	<input type="checkbox"/> 8 x LTD Posts
	<input type="checkbox"/> 2 x Press Studs
	<input type="checkbox"/> 2 x 3mm Rivet

1. TONNEAU COVER FITTING

NOTE Read entire instructions prior to start.


1.1 BASIC TOOL REQUIRED

Drill, 4mm Drill Bit, Rivet Gun, Marking Pencil / Pen

1.2 TONNEAU COVER INSTALLATION PROCEDURE


1. Place tonneau on the front of the tray as shown in Diagram A then drill through clips using a 3.2mm drill bit and screw in LTD posts as you go along in the order shown (If a head board is fitted, cut an allowance in the front of the cover for the uprights where the sew lines are close together).
2. To fit press studs, mark the back of press stud on the tonneau with a pencil opposite to the colour of your car, and push against the side wedge this will give you a mark so that you can drill through with a 3.2 mm drill bit and rivet press stud using short 3 mm rivet.
3. To fit bar brackets measure 745 mm from the inside edge at the front of the tub and place them as shown in Diagram A. (5mm down from top edge of tub). Drill with a 4mm drill bit and rivet with 4 mm short rivet.
4. Drill and rivet hooks as shown in diagram B. Using the 4mm drill bit and 4 mm long rivets.

DIAGRAM A - RODEO DUAL CAB

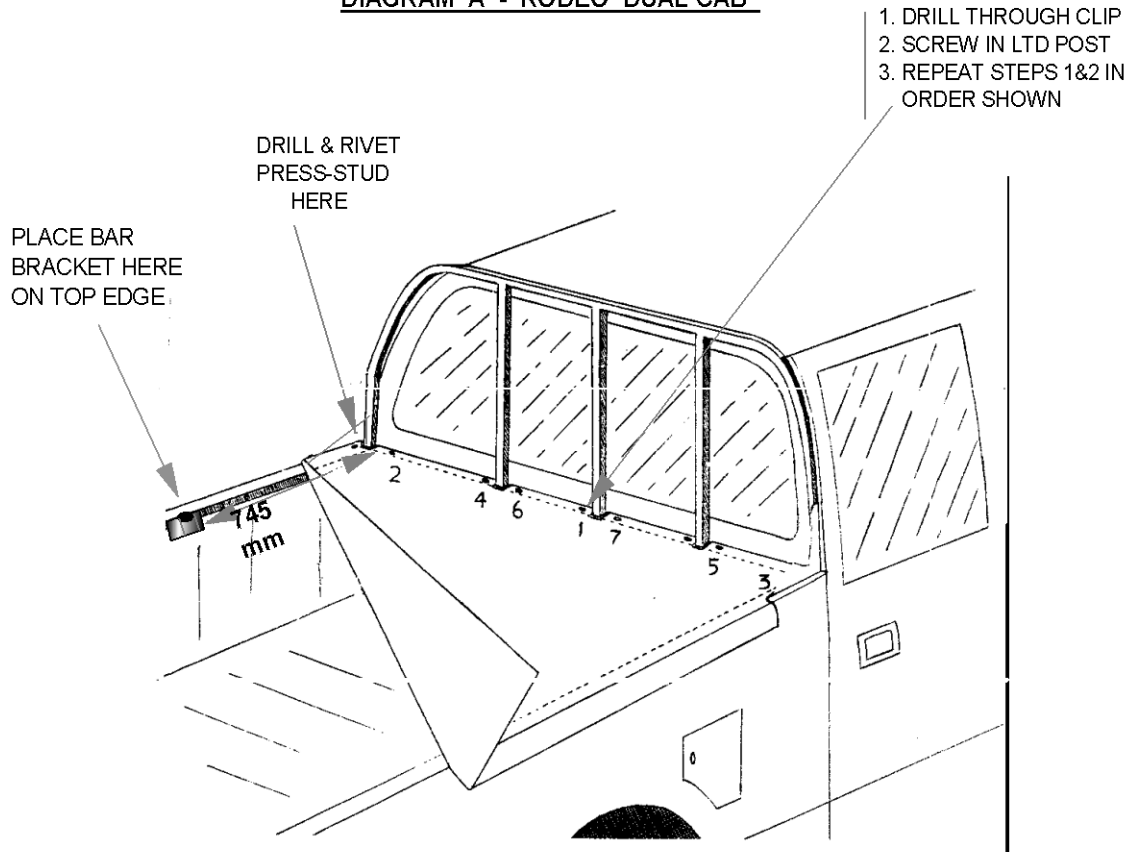

● **BODY HOOK**

DIAGRAM B - RODEO

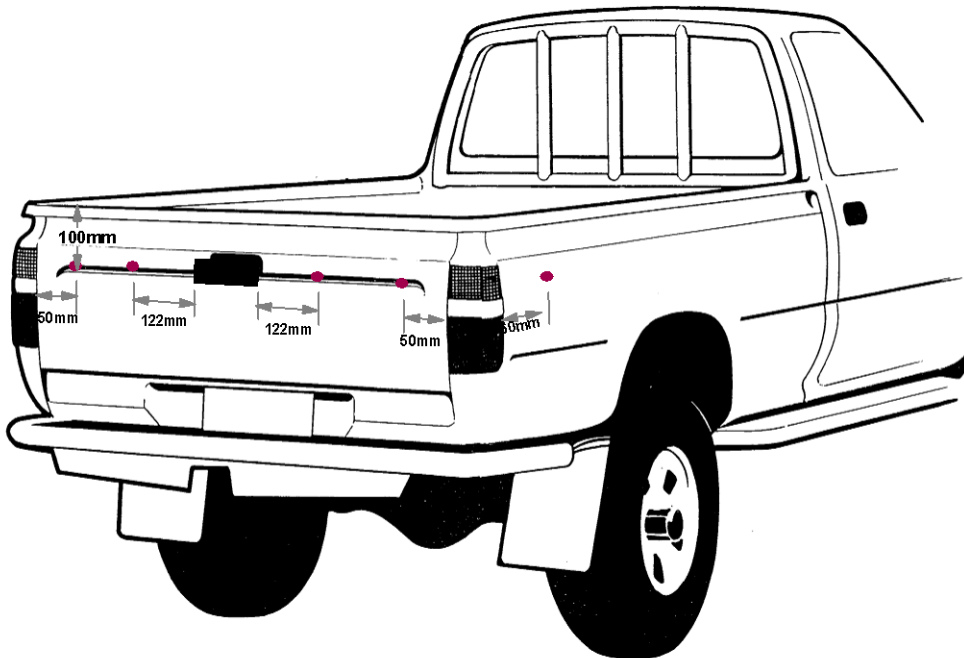

2. TONNO LOCK

The Tonno Lock is now a standard feature included with all Tuff Tonneaus. The Tonno Lock is situated at the front of the tonneau cover, so as not to impede the accessibility of the Tuff Tonneau.

Fitting the lock is simple and only requires a small attachment on the inside edge of the tub behind the cab. Together with a padlock, it provides you with an extremely effective theft deterrent. The Tonno Lock is designed to suit

all utes and prevent thieves stealing your Tuff Tonneau, so you can continue to rely on the Tuff Tonneaus' name to give you what you want in a tonneau cover.



2.1 BASIC TOOL REQUIRED

Rivet gun, Drill, Torch, and Marking Pencil/Pen.

You will need to buy a small Padlock- make sure the padlock will go through the hole on the Tonno lock.

2.2 TONNO LOCK CONTENTS

- 2 X 4MM Aluminium rivets
- 1 x Tonno Lock bracket

2.3 FITTING TONNO LOCK

1. Attach the black lock bracket to the bracket on the tonneau with your padlock, and fit the tarp.
2. Getting under the tarp with a torch, place the lock bracket against the body and mark holes with a pen.
3. Remove tonneau and drill the marks with a 4 mm drill bit, place the lock bracket in position and rivet.

3. MULTI-FIT SUPPORT BAR

The Tuff Tonneau Multi - Fit Support Bar is designed to fit almost all Utes on the Market, from Subaru Brumbys to Cab Chassis aluminium trays.



3.1 BASIC TOOL REQUIRED

Drill, 4mm drill bit

3.2 MULTI-FIT SUPPORT BAR CONTENTS

- 1 x hollow bar centrepiece
- 2 x grub screws
- 2 x solid bar end piece
- 1 x Tonneau bar sheath

3.3 FITTING MULTI-FIT BAR

1. Insert solid bar pieces into either end of hollow tube. Adjust bar so it fits between bar bracket holders with the holes facing to the ground (so the grub screws don't rub against the tonneau), as shown above and then with a white pencil make a mark through the small holes of the hollow bar onto the solid ends. This is where you will drill a hole to the depth of about 1-2mm (do not go any further)
2. Join the pieces back together and screw grub screws through the hollow bar into the holes that you drilled. **Make sure you do not over tighten the grub screws**. Then place the tonneau sheath over the bar to stop the bar wearing against the tonneau. Refit the bar. You may kink the bar in the middle to give it some extra height to assist with water runoff.

Warning if you do not fit the tonneau sheath over the bar, the tonneau cover will quickly wear through which is not covered by warranty.

4. WARRANTY AND FEEDBACK

Please register your warranty details online at:

QR Code:



Website Link:

<http://www.tto.com.au/en-au/warranty.html>

Please complete our 2 minute feedback section as we strive to constantly improve for our customers.

Your Tuff Tonneau is now ready for work.