





CLIPON 2.0[®]

INSTALL INSTRUCTIONS

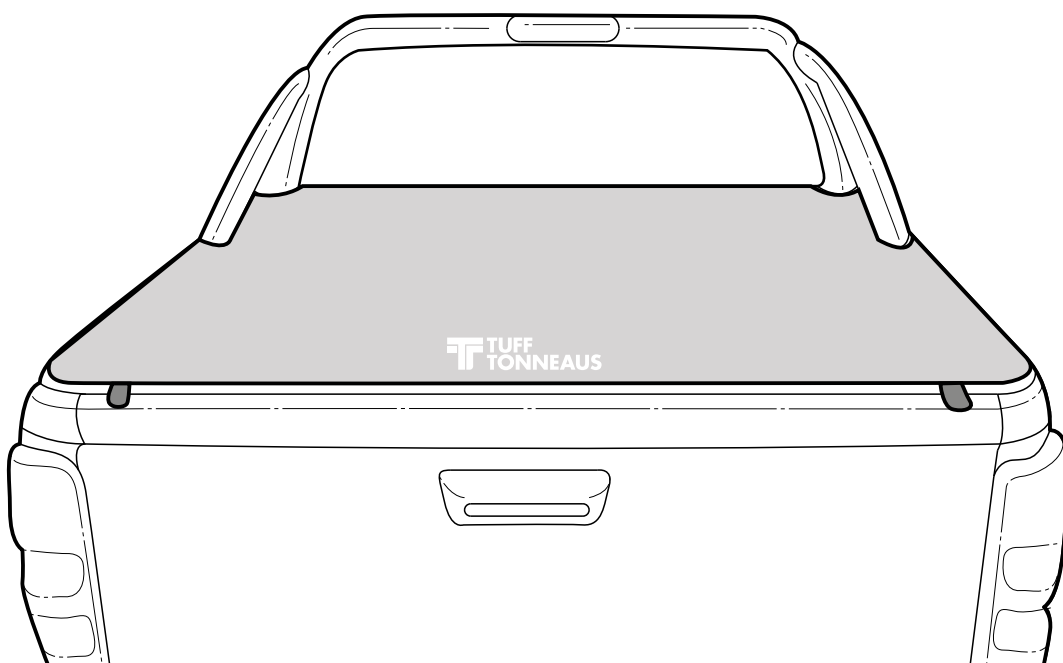

**NISSAN NAVARA
SPORTS BAR MODEL**

PARTS SUPPLIED

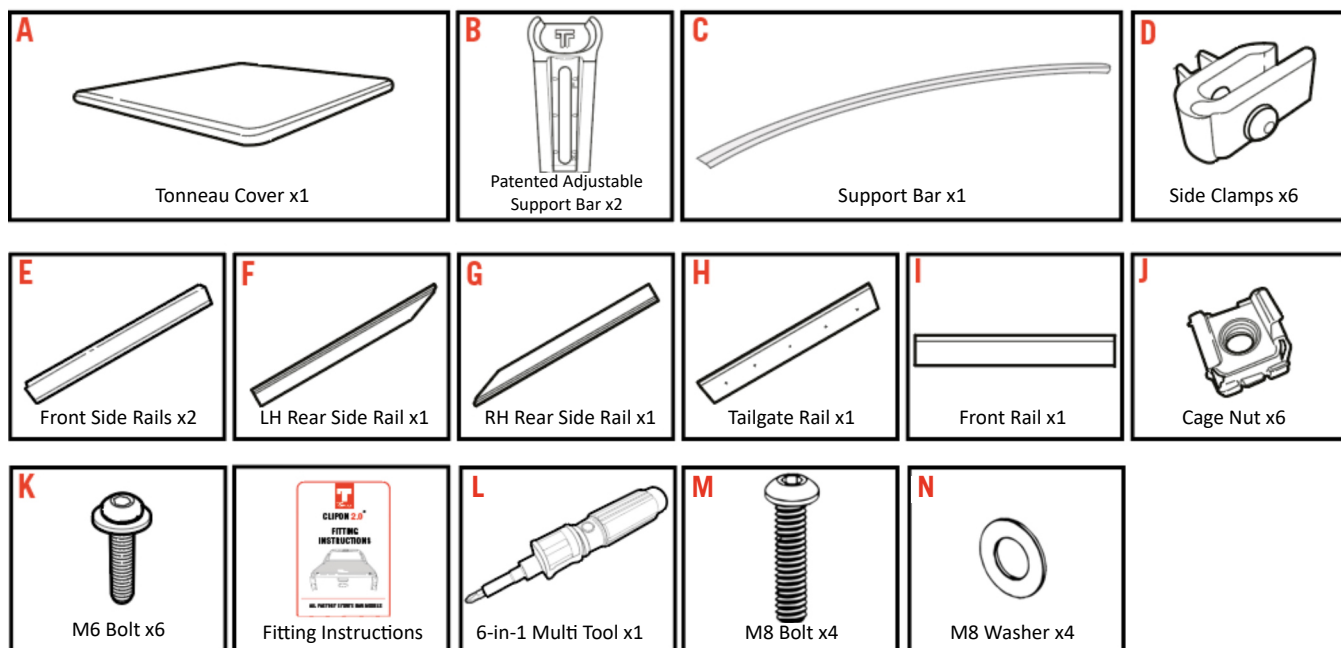

SAFETY NOTES

- Ensure that appropriate Personal Protective Equipment is used.
- During the accessory tment, ensure all Australian automotive and dealership safety practices are followed.
- Always refer to the vehicles workshop manual when removing components.
- Never use a powered drill to screw the bolts. Always do this by hand with the tool provided to prevent damage to the fasteners.




EXAMPLE FITTING VIDEO



- Please also check out our video of tting a 2.0 tonneau cover.
- Visit the following link: <http://bit.ly/nodrill-tonneau>
- Or simply scan the QR code.
- NB: Some models may vary slightly in tment, so always consult your tting instructions for more information.



- FINAL ASSEMBLY

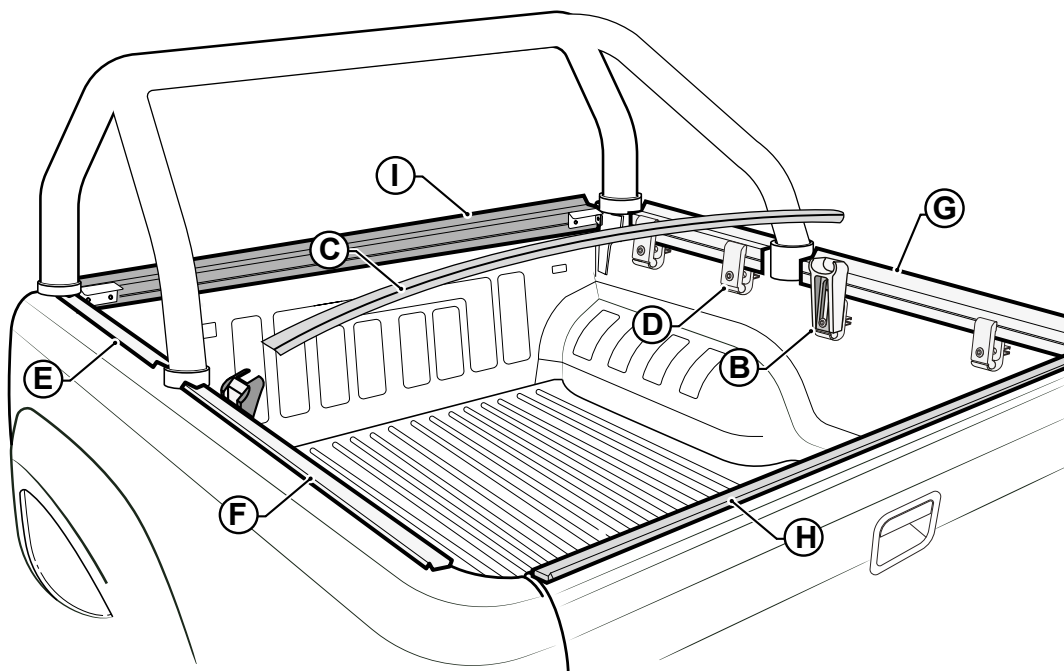

1 ATTACH THE FRONT RAIL.

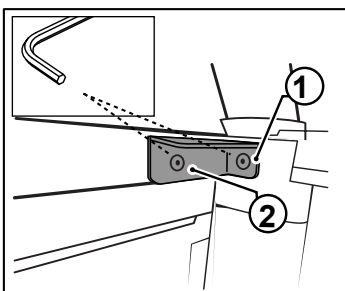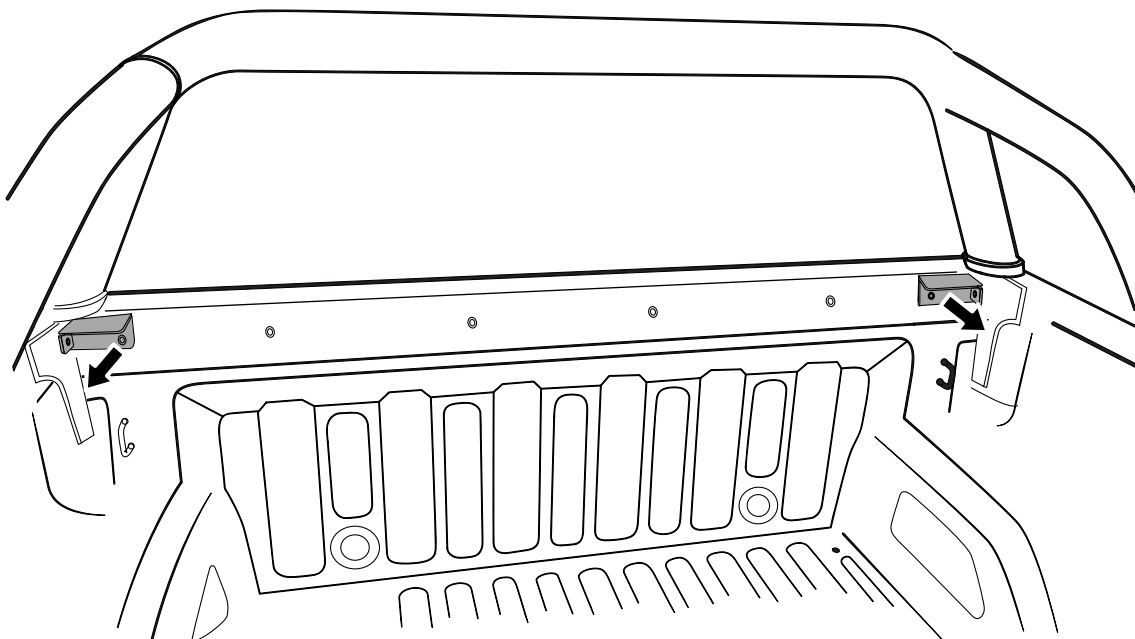


Remove Bolts (2) & (1) to loosen and remove the sport bar bracket before attaching Front Rail.


Set the bolts and bracket aside.

1


ATTACH THE FRONT RAIL CONT.

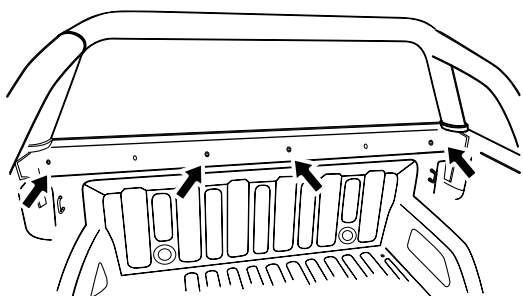


- Note: There are 6 holes in the front of the vehicle's tub. Only 4 of these holes are used.

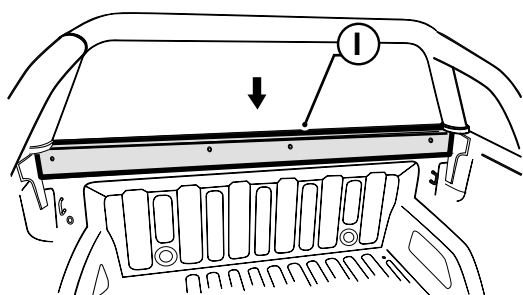


- Insert the front rail into the space between the front of the vehicle's cabin and the sport bars.
- Line up the holes of the front rail with the holes of the tub

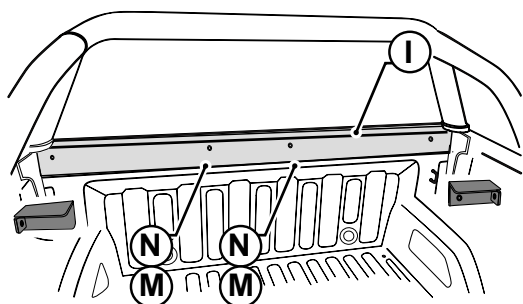

- Insert the M8 screws (M) and M8 washer (N) to hold the front rail in place.

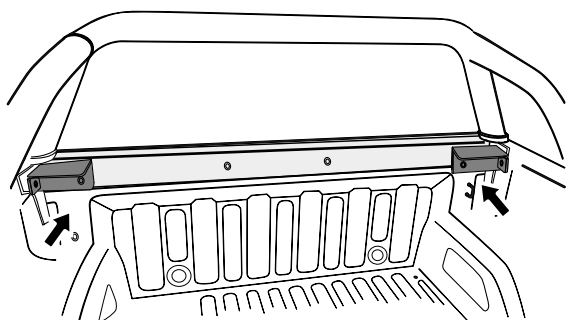

- Prior to installing the outer-most M8 screws (M), re-install the sport bar bracket (1) in front of the front rail (1).
- Then, proceed to tighten (M) and the sport bar bracket (1) bolts.

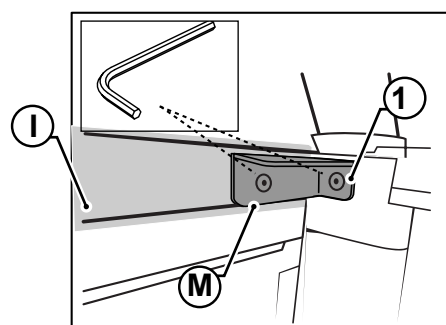

2



ATTACH THE FRONT SIDE RAILS

Important



The side clamp **D** and bar bracket **B** need to engage at a minimum with the 2nd tooth **1** for a secure fit.


- Repeat for the RHS.

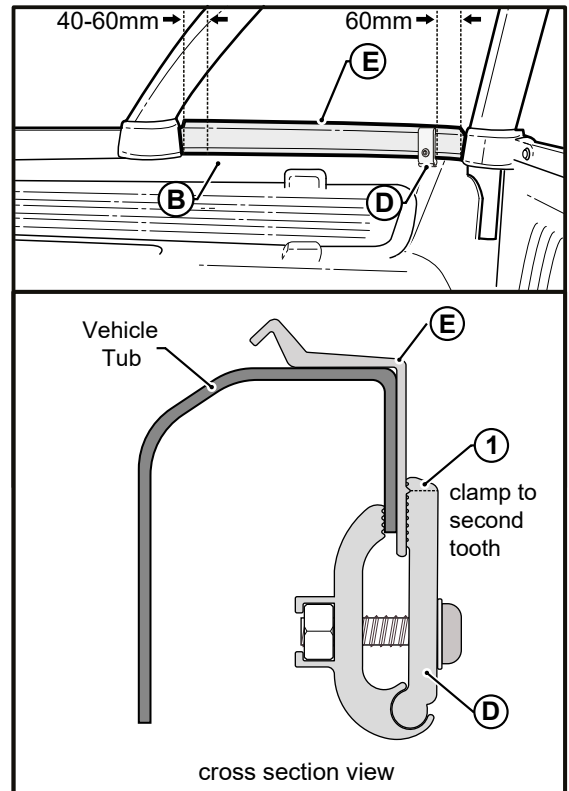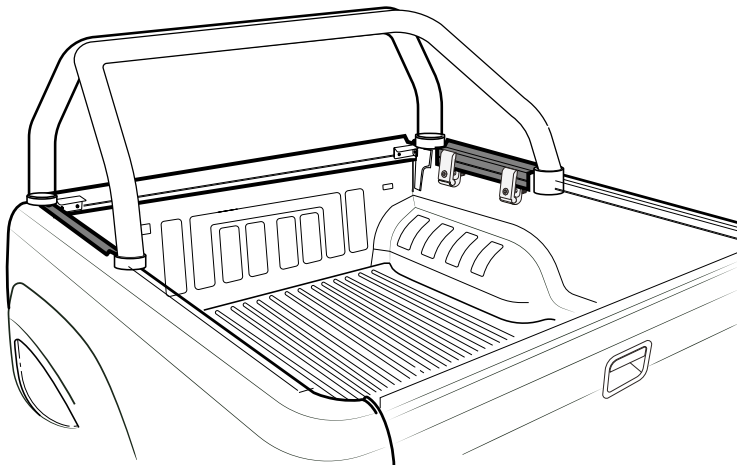

3


ATTACH THE REAR SIDE RAILS

- Attach two clamps **D**
- Repeat for other side rail **F**.
60mm to 100mm from either side of the rail.

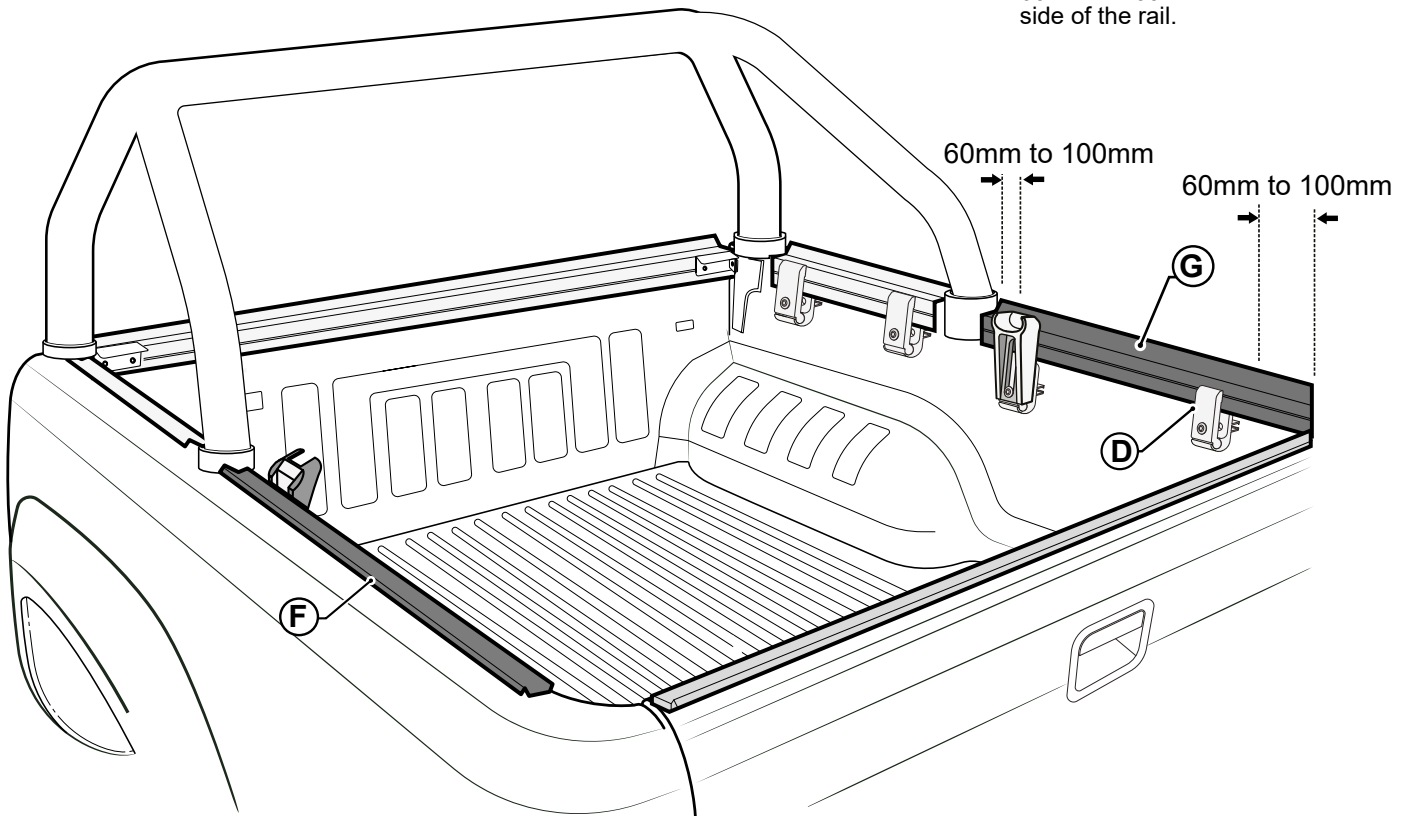

4


FIT THE SUPPORT BAR

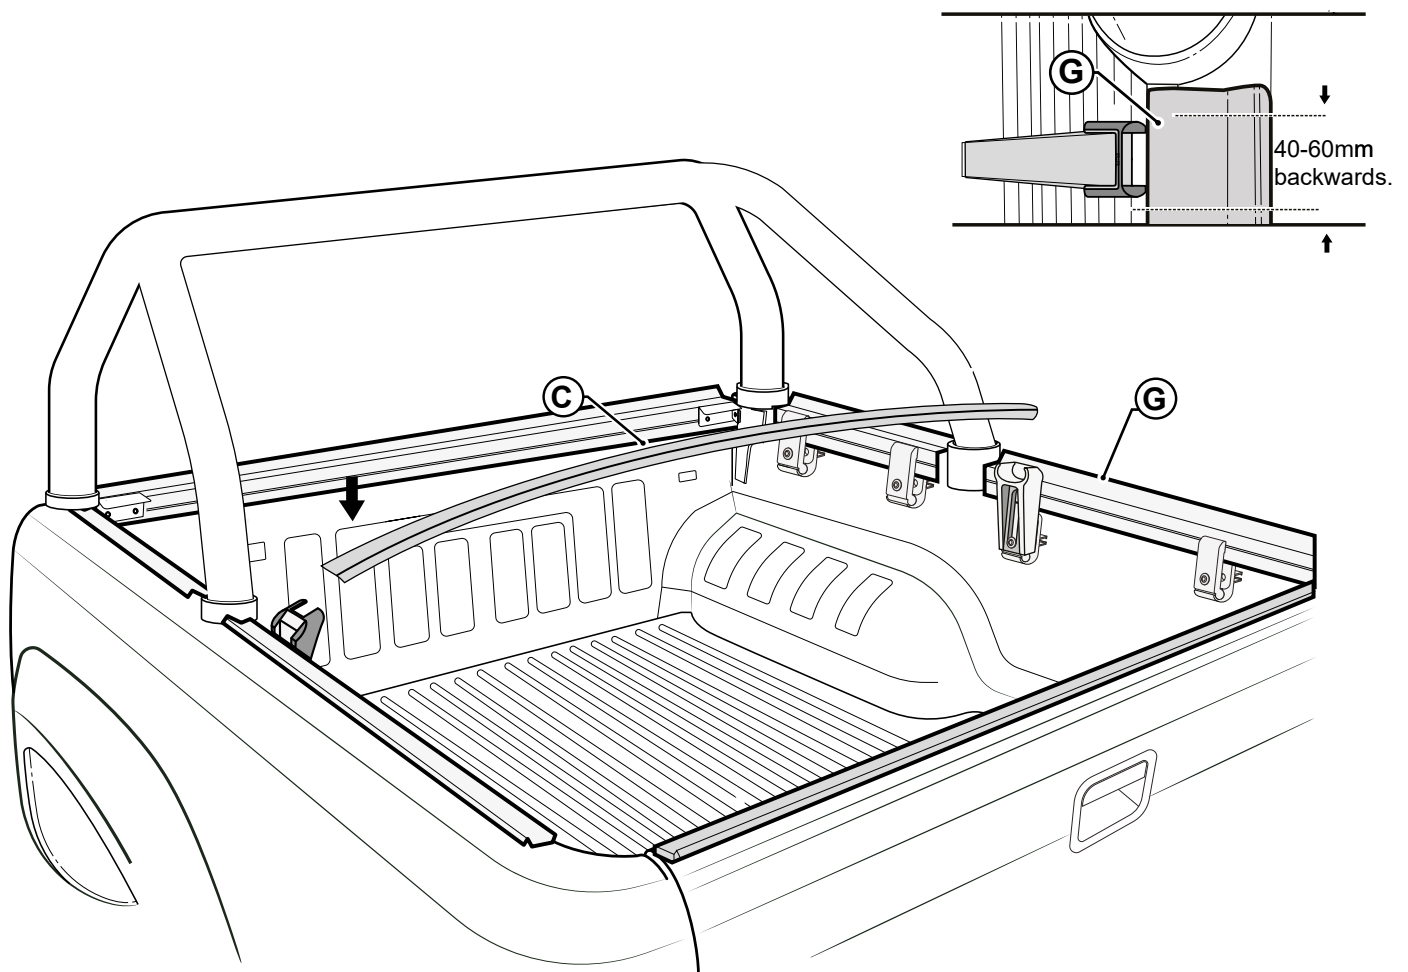


- Ensure the assembled bar bracket and clamp is fitted 40-60mm backward from the rear of the LH & RH Rear Side Rails .
- Rotate the Support Bar (C) 90° and push into the Patented Adjustable Bar Bracket (B).
- Ensure it is seated firmly into place by pushing lightly in the centre of the Support Bar (C).

5 PREPARE THE TAILGATE


- Remove tailgate liner (if fitted), by unscrewing the screws ① and then peeling off the plastic retainer (if fitted).

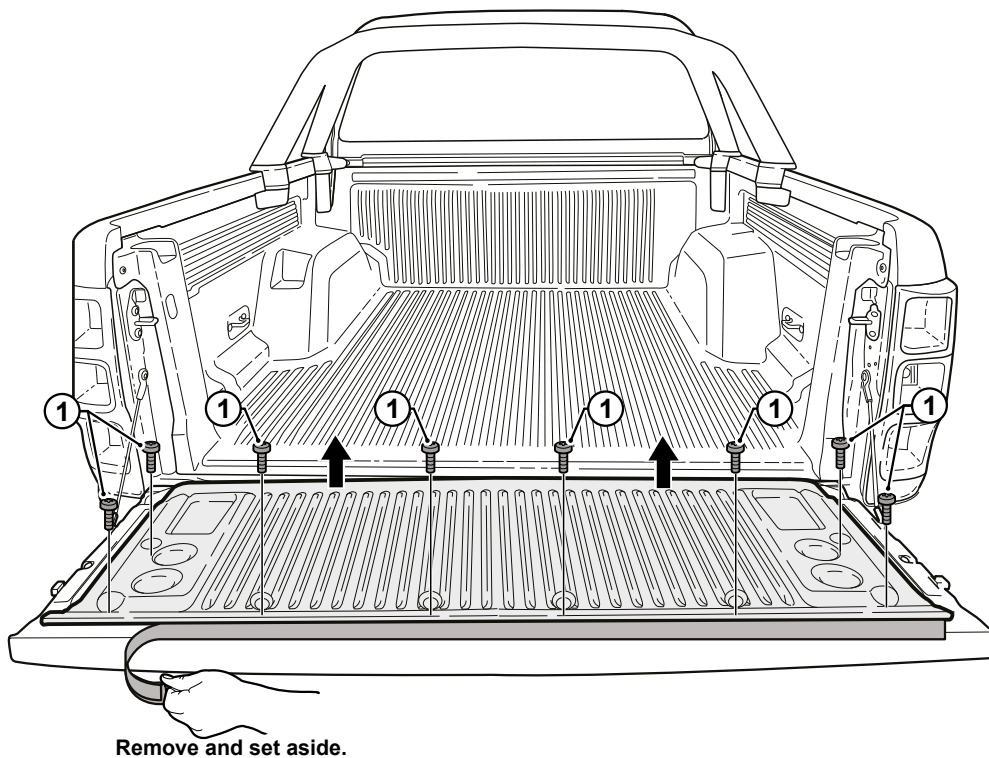

- Remove the inspection panel by unscrewing any remaining screws ②.

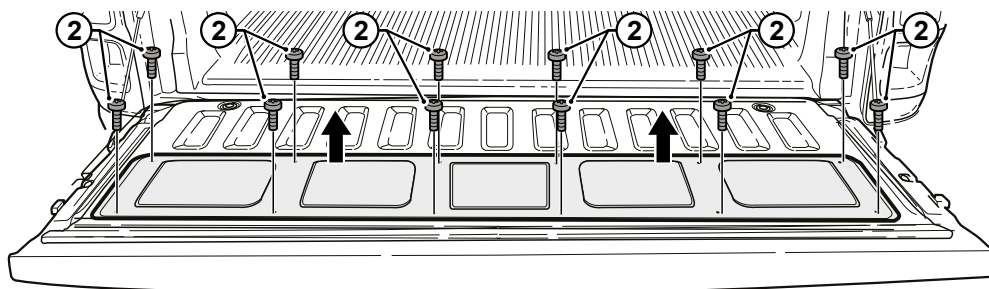

- Remove the six plastic inserts ③ from the top of inspection panel.

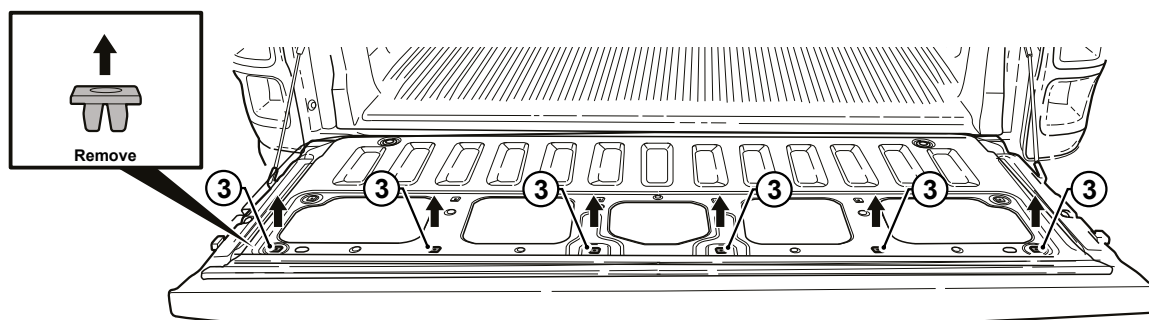


6

FIT THE CAGE NUTS

- Replace the plastic inserts with the supplied Cage Nuts (J).

Note: Fit the cage nuts from the underside of the inspection panel. First engage one leg of the cage nut in the hole and then apply some force and push the other leg of the cage nut so that it fits through the hole.

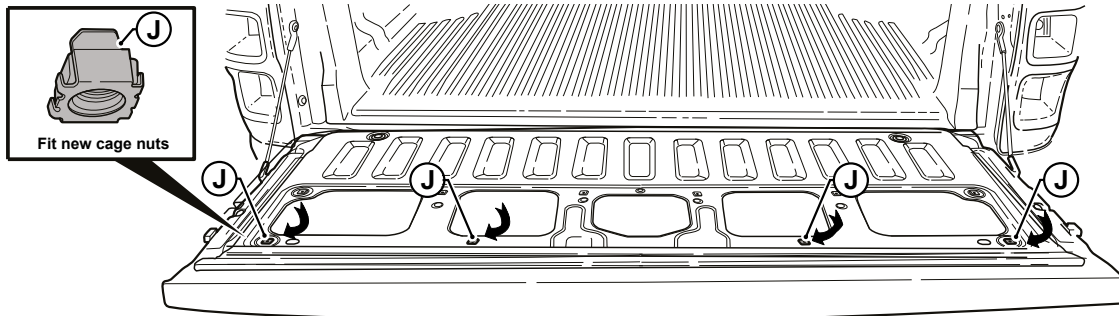


For Vehicles with Ute Liners Fitted Only:

- Without refitting the screws yet, place the inspection panel first, followed by the Tailgate Rail (H), into position on the tailgate. Then put the tailgate liner over the top. Take note of all holes which will be covered over by the tailgate liner. Then set aside.

Note: It may help to mark these holes with a felt pen or pencil.

- For the holes you just marked:
 - Refit original factory screws to the bottom row of the tailgate, as required.
 - Fit M5 Bolts (K) to the Cage Nuts (J) to the top row of the tailgate, as required.

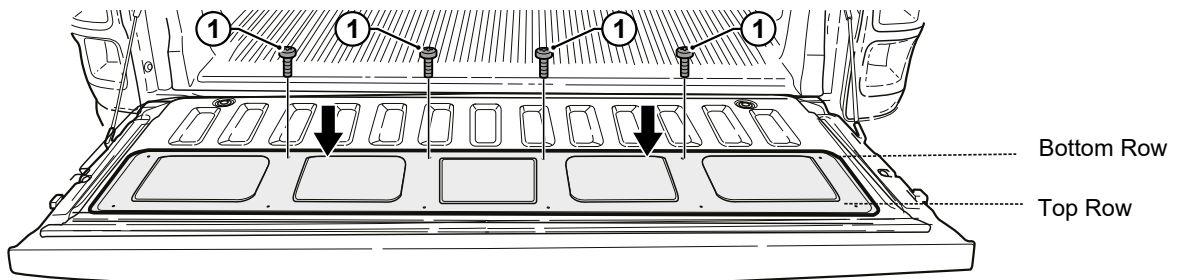

Important



Factory screws must only be refit to plastic inserts.
M5 Bolts (K) must be fitted to Cage Nuts (J).

Important





Use VERY low torque when refitting factory screws as there is a risk the thread inside the plastic inserts will strip.

For Vehicles without a ute liner please continue to Step 7.


7

ATTACH THE TAILGATE RAIL

- Fit the Tailgate Rail (H), then place the tailgate liner (if fitted) on top ensuring all holes are aligned.
- Place an M5 Bolt (K) through the tailgate liner (if fitted), Tailgate Rail (H), inspection panel and into each of the Cage Nuts (J) and tighten using the 4mm hex bit on the 6-in-1 Multi Tool provided.

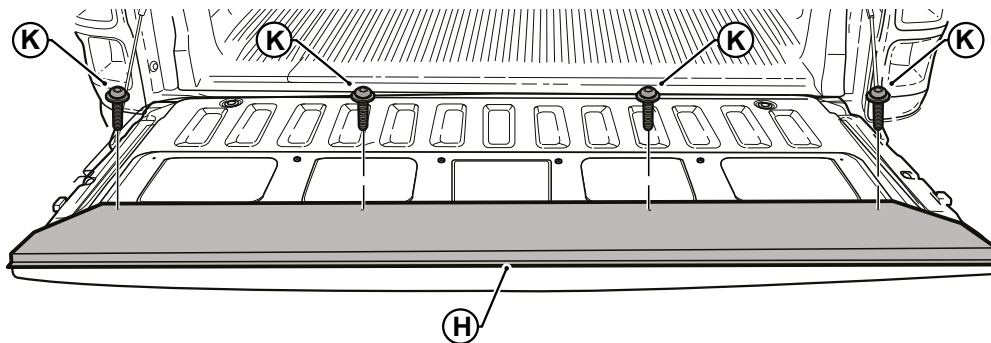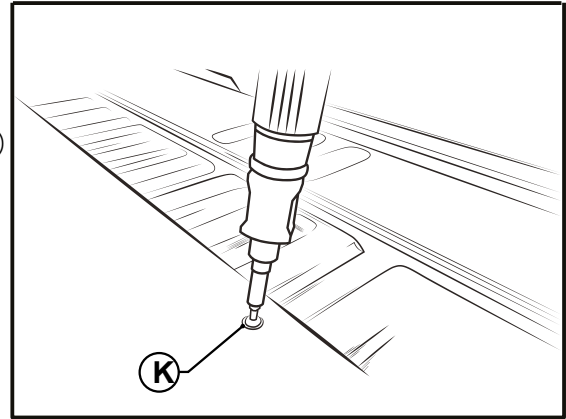

- For vehicle's with tailgate liners, use the original screws (1) and secure the outside edges of the bottom half of the liner.
- Refit the Plastic Retainer Strip which was removed in Step 5 to the edge of the tailgate liner.

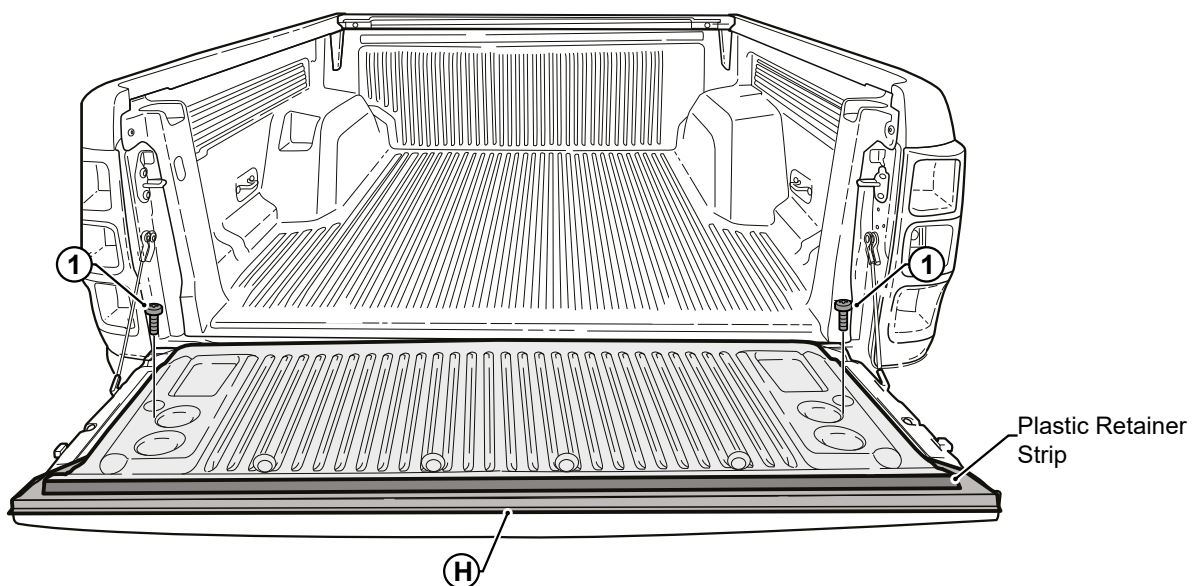

8

FIT THE TONNEAU COVER

- Attach the plastic retainer strip on the front of the Tonneau Cover (A) to the front rail (I).
- Engage the back of the cover first, followed by the sides.

Note: Ensure the support bar is fitted underneath the Tonneau Cover to prevent water ingress and to keep the cover tight.



Use the pull tabs to assist whenever you open or close your cover.

Note: Fitment will be tight straight out of the box, but this should loosen up a little after a week or so.




ADJUSTING THE TENSION OF THE COVER

- To adjust the tension of the cover, you must adjust the height of the support bar. To do this, we have designed a patented adjustable bracket system which will allow you to freely adjust the height to any position within the range of the bracket.
- Simply loosen the bolt which goes through the Bar Bracket (C) and Clamp (E) . then move the bracket either up or down until the bolt is at your desired level. Re-tighten the bolt.
- Your Adjustable Bar Bracket has a large tension range.
 "L" lowers the height and loosens the cover.
 "H" increases the height and tightens the cover.



"L" set here if cover is tight and hard to clip on.

"H" set here if cover is loose or if water is pooling on it.

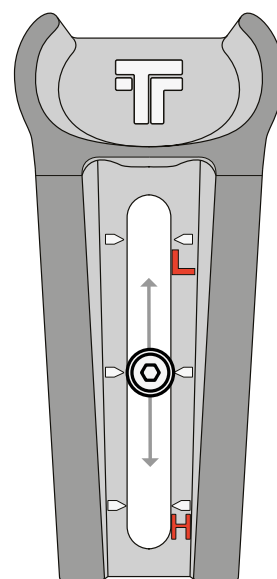


CONGRATULATIONS!
YOU HAVE SUCCESSFULLY INSTALLED YOUR
CLIPON 2.0® TONNEAU COVER

HOW TO USE THE OVERSIZED LOAD SYSTEM


STEP 1

- Place the load into the ute tub then drape the tonneau cover over it as shown.

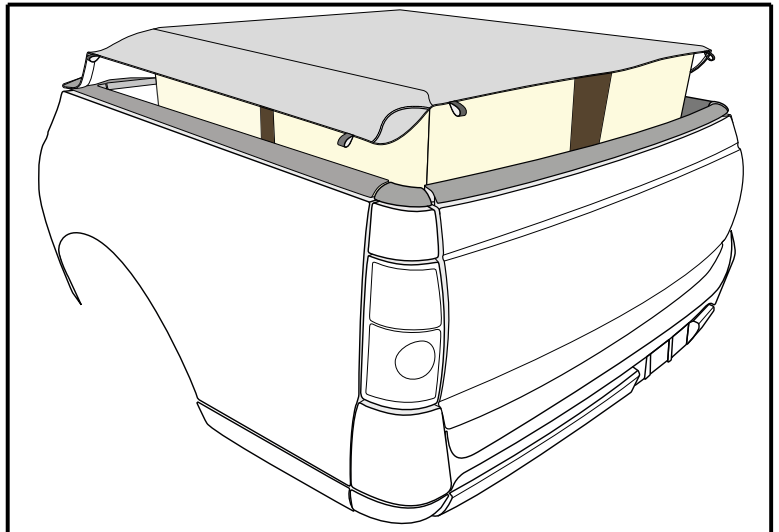


STEP 2

- Engage the Rope Hooks from underneath the Tonneau Cover and clip each one onto either the Tub Rail (Holden Commodore/Crewman) or Aluminium Rail (all other vehicles).

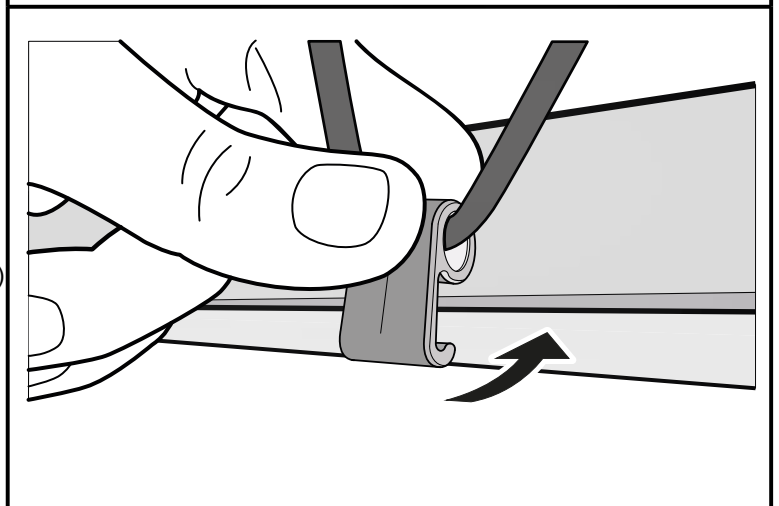

STEP 3

- Engage all Rope Hooks for a secure fit.

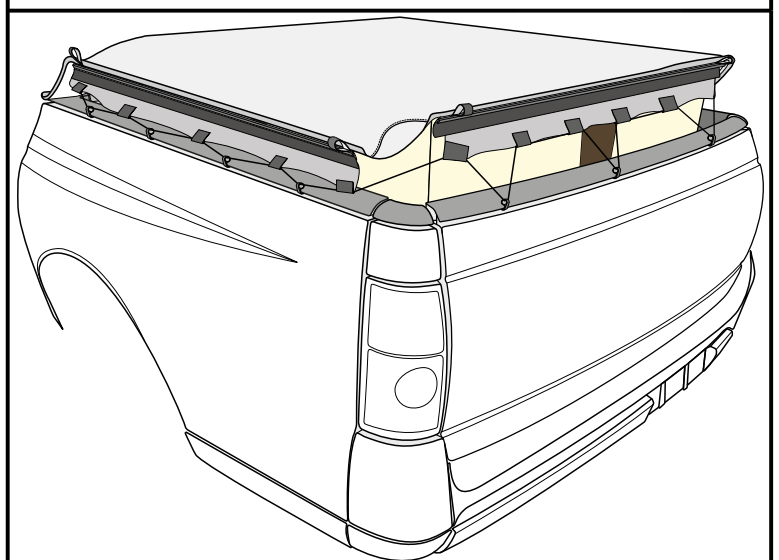

Important



The Tonneau Cover is not designed to be a load restraint. You **MUST** securely tie down your load first and then use the Oversized Load Cover System.